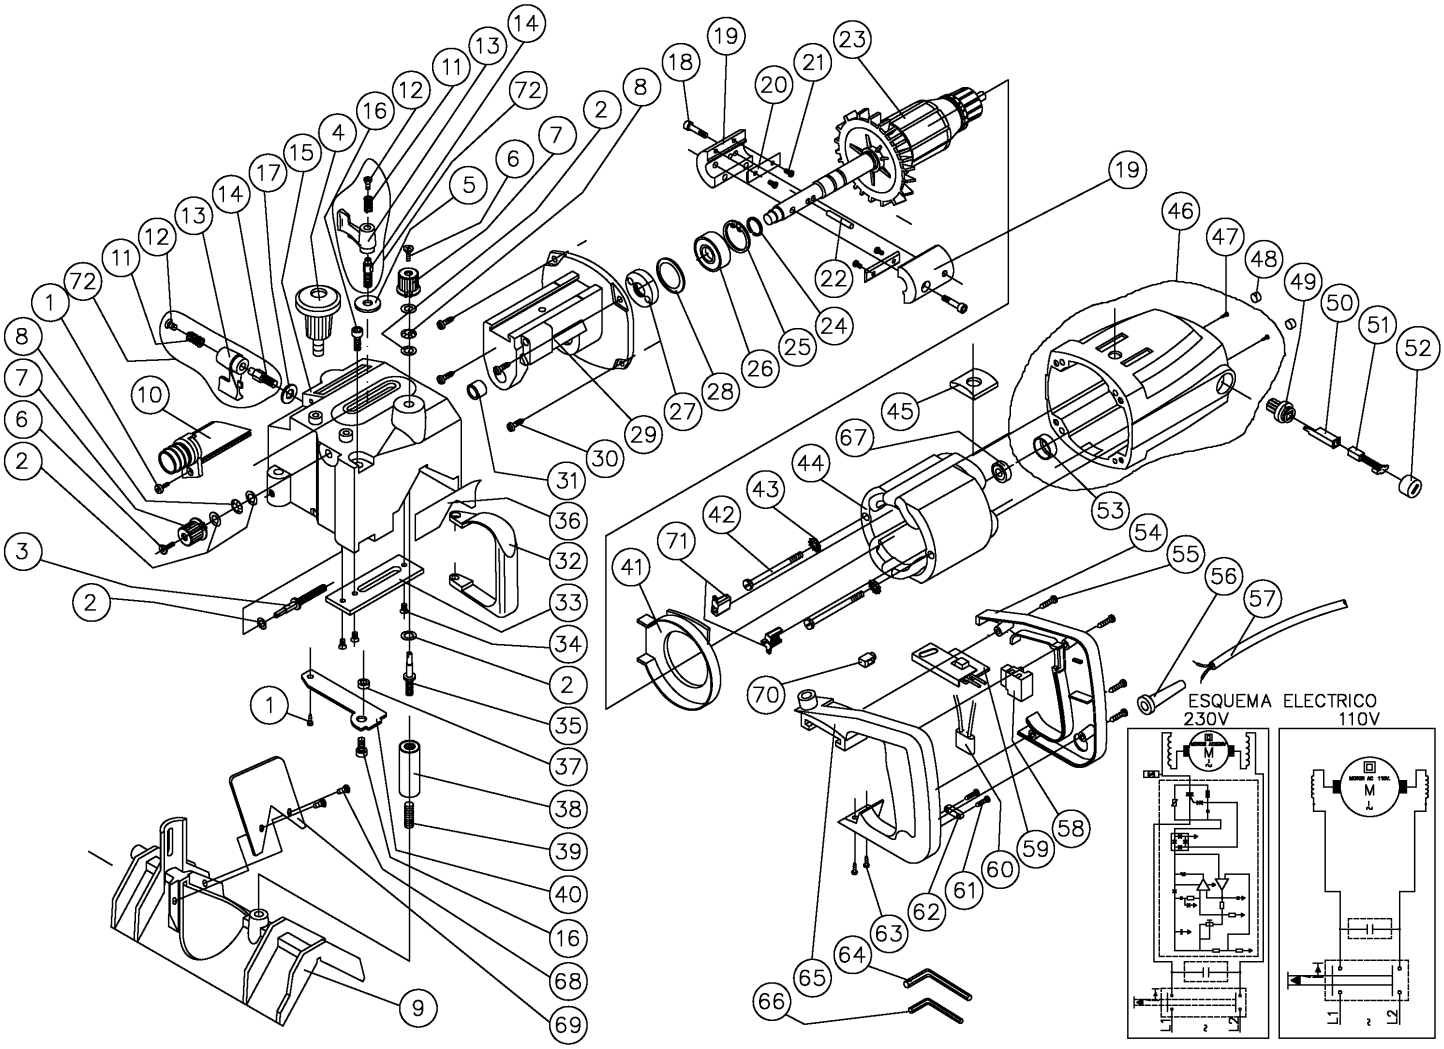
Technical information
Explosion drawing and parts list


Shaper machine FR98H (Ref. 9800000)
(*) Parts not mounted in the current version

Pos.	Code	Vrs.	Serie	Item
1	8678008			SCREW M.4X10 PH.
2	2023022			WASHER
3	9822191			REGULATION HEAD SHAFT
4	8025011			HANDLE KNOB
5	1580017			WASHER D.6.2X21X2
6	1973020			FLAT HD. SCREW M.4X10 PH.
7	1502174			REGULATING KNOB
8	2024084			SPRING WASHER E=0.4
9	9806199			FENCE
10	6403029			NOZZLE
11	1426051			SPRING
12	6673010			FLAT HD. SCREW M.5X8 PH.
13	9502649	E0	2210	LEVER
* 13 -	9999998			CHANGED SPARE PART POSITION
14	9822522	E0	2210	SCREW
* 14 -	9999998			CHANGED SPARE PART POSITION
15	9806200			FENCE HOLDER
16	9875080			SCREW M.10x25
17	8423195			WASHER D.6.3XD.15X1.5
18	9875079			SCREW M.6x30
19	9845239			CUTTER HOLDER (FOR 9841004)
19 -	9845270			CUTTER HOLDER (FOR 9841005)
19 -	9845271			CUTTER HOLDER (FOR 9841010)
19 -	9845272			CUTTER HOLDER (FOR 9841011)
19 -	9845273			CUTTER HOLDER (FOR 9841006)
20	9841004			CARBIDE STRAIGHT BLADES SET
20 -	9841005			CARBIDE BLADES SET 1/4 R:5/10/15
20 -	9841006			CARBIDE MOULDING BLADES SET
20 -	9841010			CARBIDE BLADES SET 1/4 R:25
20 -	9841011			CARBIDE BLADES SET 1/2 R:4/5/7
21	9875091	B0	1519	SCREW FOR HOLDING BLADES
* 21 -	9875082			SCREW M.4x10 K12
22	9888099			ROLL PIN D.5X30 LD-5
23	9851124			ARMATURE ASS'Y 110 V.
23 -	9851125			ARMATURE ASS'Y 127 V.
23 -	9851186			ARMATURE ASS'Y 230 V,
24	6088024			RETAINING RING SW-17
25	6388049			RETAINING RING D.35
26	2710020			BALL BEARING 6003-ZZ
27	9822194			NUT
28	9883016			WASHER
29	9806201			HEAD
30	2070009			PAN HD. TAPPING SCREW 10X3/4 PH.B.
31	9811014			NEEDLE BEARING BK1010
32	1402083			HANDLE
33	9823205			HEAD GUIDE
34	7278007			SCREW M.4X12 PH.
35	9822190			FENCE REGULATION SHAFT
36	9819181			LABEL
37	9822192			CENTERING COLLAR
38	9822195			FENCE GUIDE
39	9875081			HEX. SOCKET SET SCREW M.8X15 DIN916
40	9823204			LOWER PROTECTION
41	9503053			FAN GUIDE
42	3070045			PAN HD. TAPPING SCREW 8X67
43	9581010			TOOTHED WASHER D.4
44	9555028			STATOR ASS'Y 110/127 V.
44 -	9855178			STATOR ASS'Y 230 V.
45	9502057			HANDLE LOCK
46	9802249			HOUSING
47	6478001			SCREW M.4X8 PH.
48	9502254			SCREW CAP
49	6018008			BRUSH HOLDER INSULATOR
50	6018007			BRUSH HOLDER
51	2417021			CARBON BRUSHES SET
52	6018011			BRUSH CAP
53	2404188			BUSHING D.22
54	9802252			HANDLE COVER
55	3570025			PAN HD. TAPPING SCREW 8X7/8 PH.BZ.
56	8002043			CORD ARMOR
57	4645542			CORD ASS'Y
57 -	4645505			CORD ASS'Y (USA)
58	3515034			SWITCH
59	9845236			ELECTRONIC CIRCUIT
60	9168121			CAPACITOR
61	1970001			PAN HD. TAPPING SCREW 8X1/2 PH.B.
62	4302025			CORD CLAMP
63	9570012			PAN HD. TAPPING SCREW 8X3/8 PH.B.
64	6699025			HEXAGON BAR WRENCH 5 mm
65	9845233			HANDLE
66	1699021	B0	1519	WRENCH 2.5 mm
* 66 -	1699014			WRENCH 3 mm
67	1910002			BALL BEARING 608-ZZ
68	7278014			SCREW M.4X8
69	9823222			CHIPS OUTLET
70	7168188	C0	1922	TERMINAL
71	9502443	D0	1961	WIRE PROTECTOR
72	9845826	E0	2210	LEVER ASS'Y
S/P	9894182			CARTON BOX


ESQUEMA ELECTRICO
230V
110V


Technical information
Explosion drawing and parts list

Shaper machine FR98H (Ref. 9800000)
Edition D

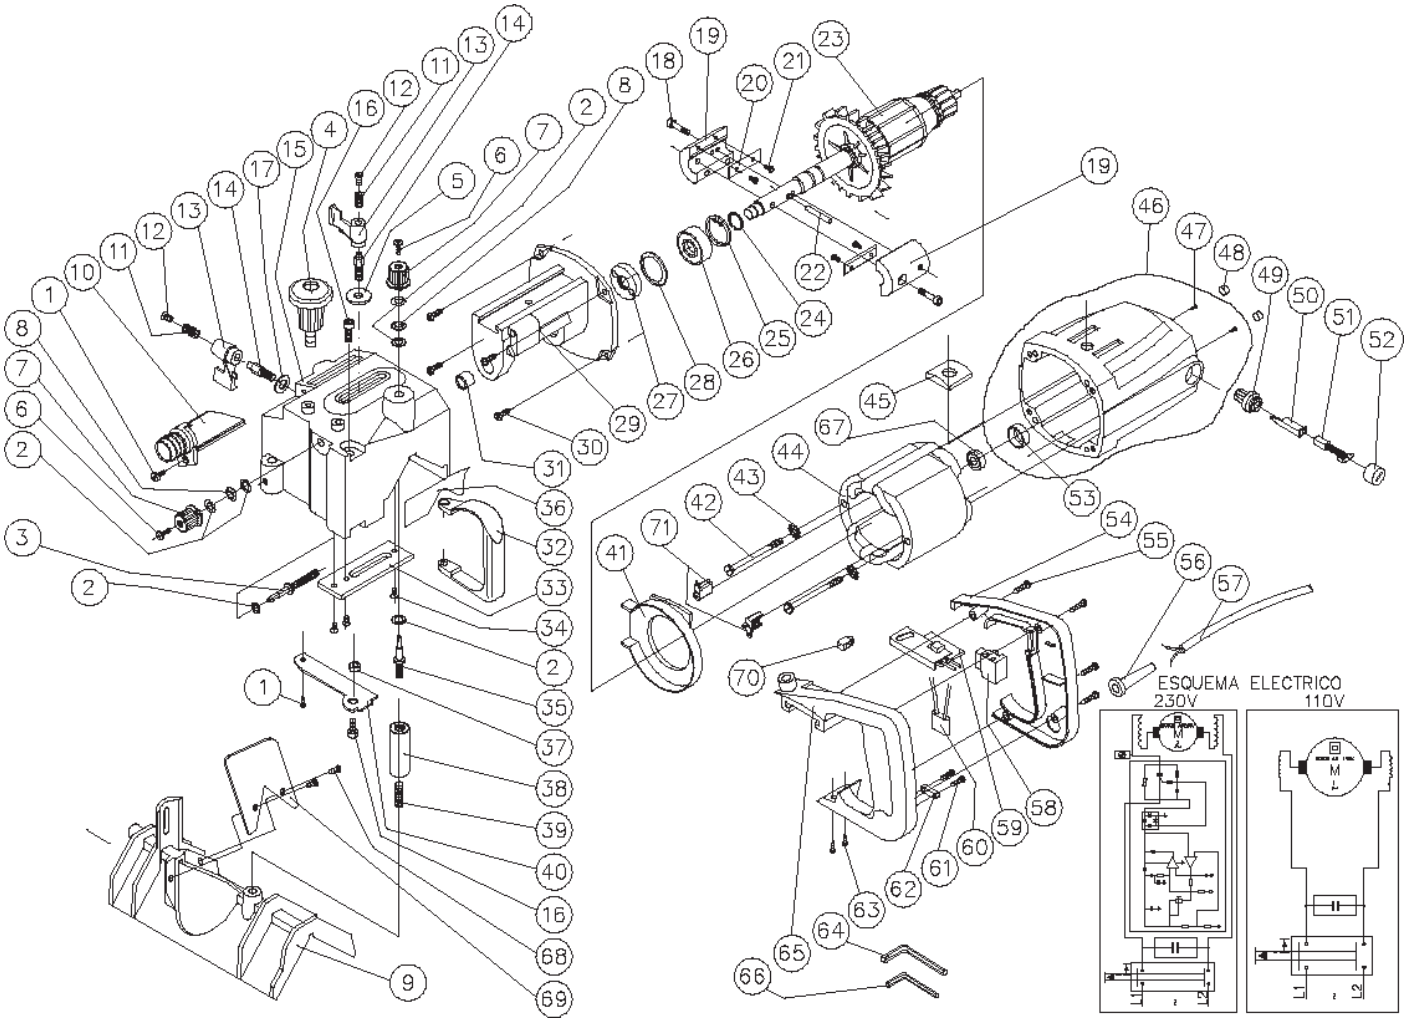


Technical information
Explosion drawing and parts list

Shaper machine FR98H (Ref. 9800000)
Edition C

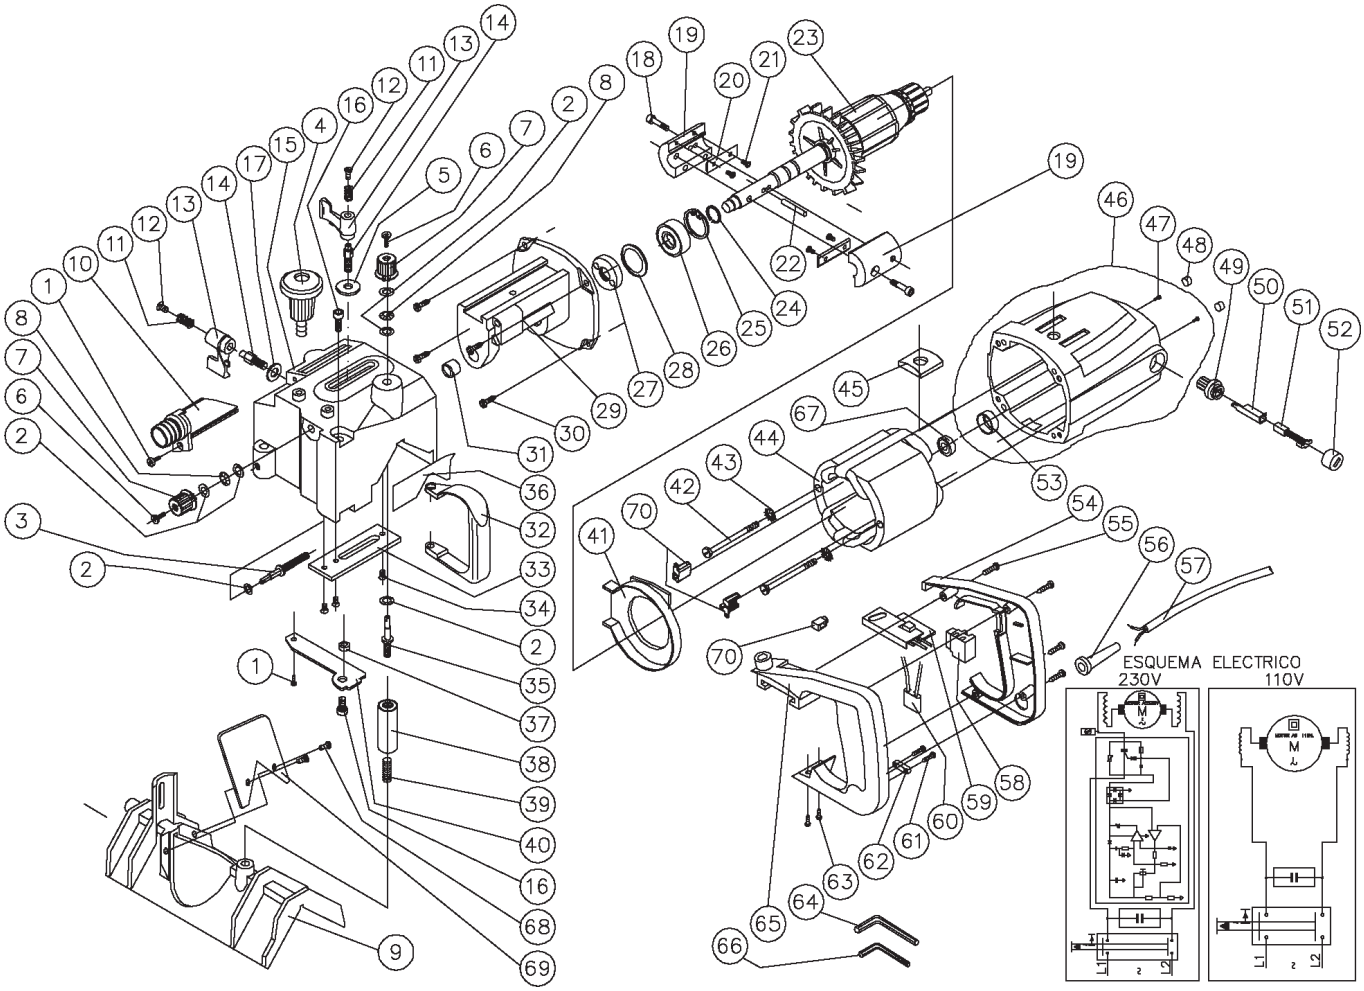

Technical information
Explosion drawing and parts list

Shaper machine FR98H (Ref. 9800000)
Edition B

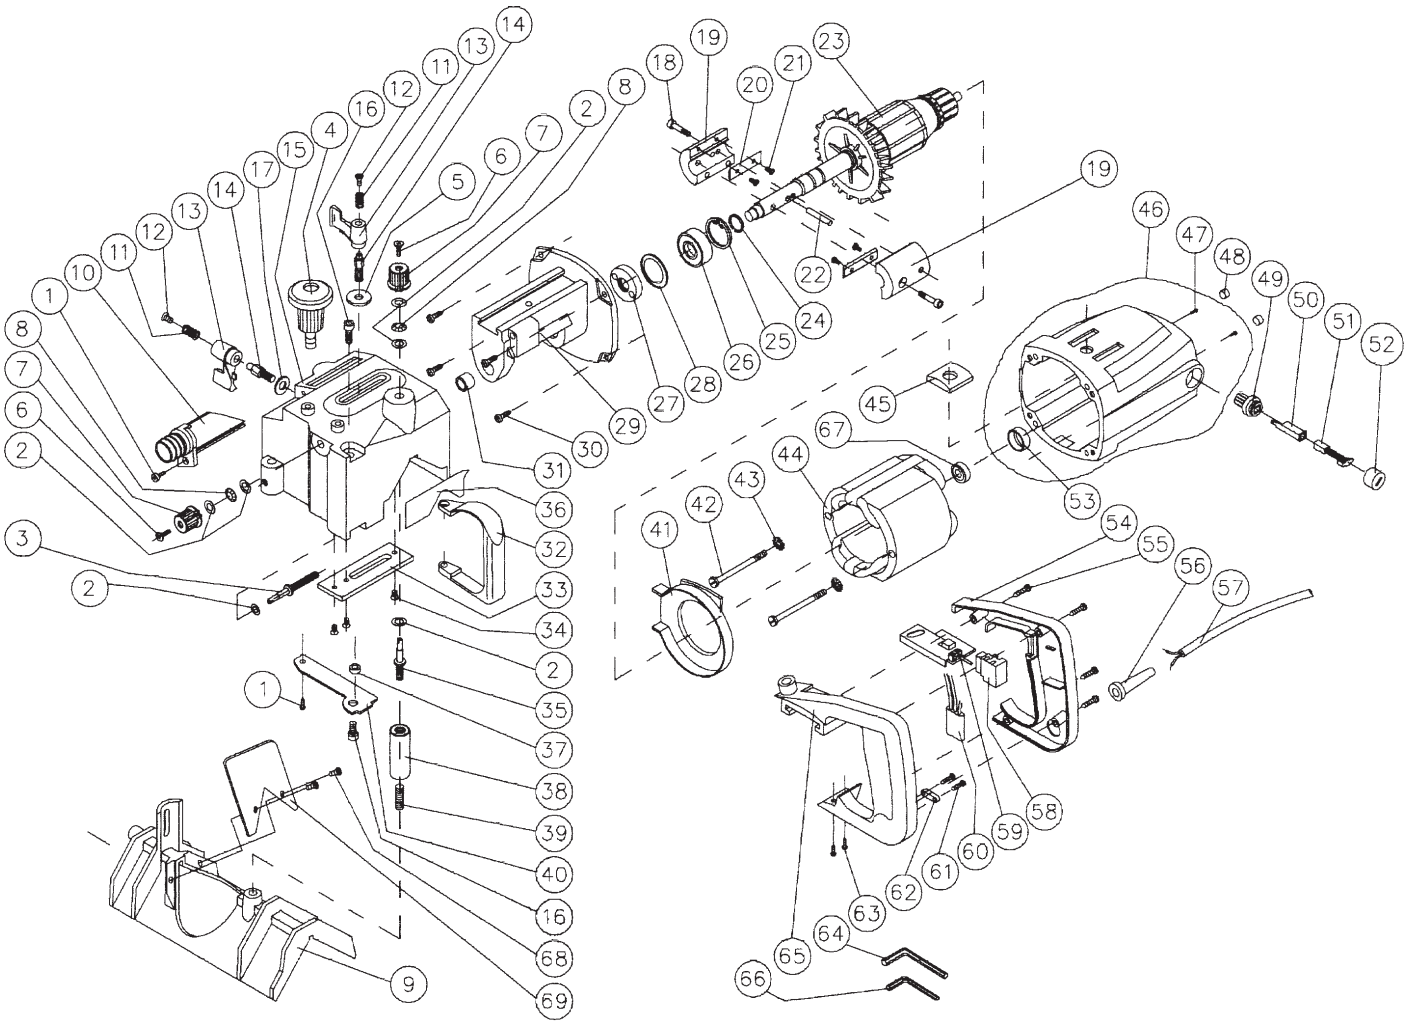

Technical information
Explosion drawing and parts list

Shaper machine FR98H (Ref. 9800000)
Edition A

